


TECNO SHOWER DISPENSER



T-Shower is one of the latest innovations realised by VDM: it allows to pre-impregnate quickly and in a perfect and homogeneous way 20 microfibre flat mops using **only 1,5 lt of water**

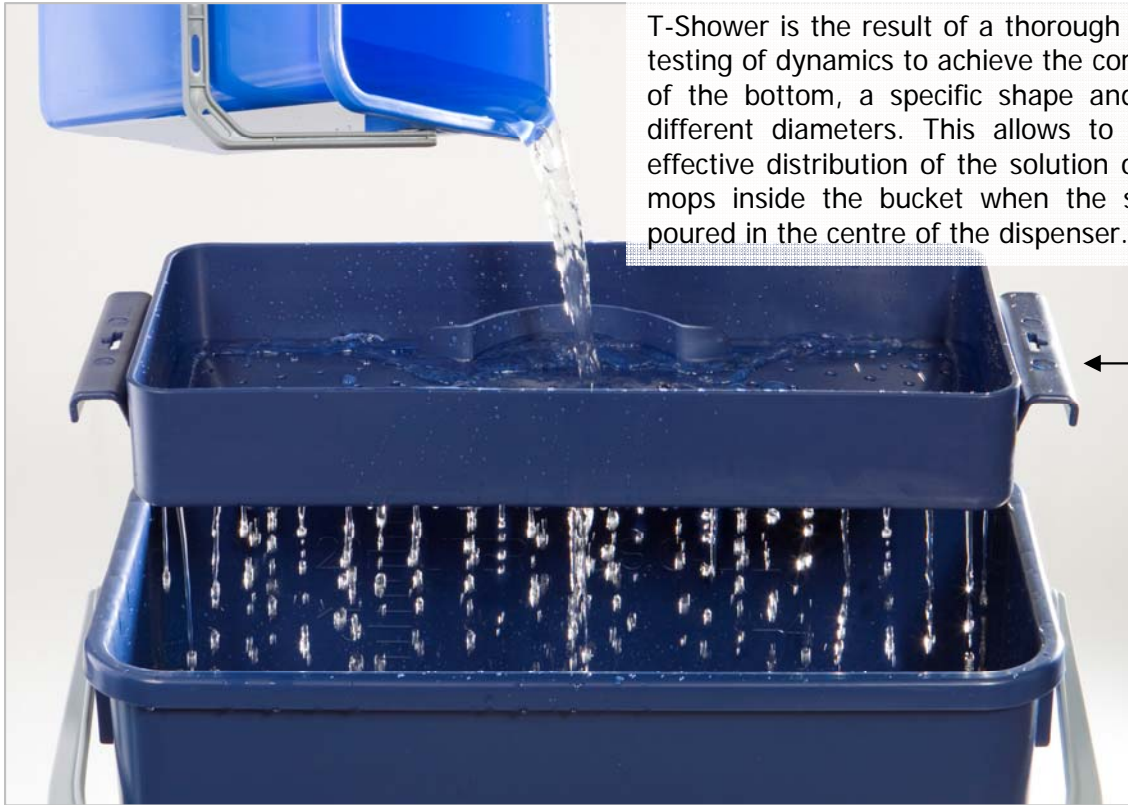

T-Shower is the result of a thorough study and testing of dynamics to achieve the correct angle of the bottom, a specific shape and holes of different diameters. This allows to obtain an effective distribution of the solution on the flat mops inside the bucket when the solution is poured in the centre of the dispenser.

Art. 7080

HOW TO USE IT

- 1) Put into the rectangular bucket two rows of 10 flat mops previously washed into the washing machine and dried at 800÷1000 rpm **with the velcro part upwards**
- 2) Put the T-Shower dispenser onto the bucket edge (see photo 2)
- 3) Pour with decision 1,5 lt. of water with the right quantity of detergent/disinfectant into the centre of the dispenser where the circular fins act as water-jet protection **
- 4) Leave the T-Shower in position for 5 minutes whilst the water drains and all the flat mops get completely impregnated
- 5) Hang the T-Shower to the frontal edge of the bucket using the appropriate hooks (see photo 5). The flat mops are homogeneously impregnated and ready to clean a surface of about 400 m²

2)



5)



** 1,5 lt. of solution is the right quantity for 20 VDM flat mops art. 7039. If you use other kinds of flat mops, you may need more or less solution.